



INCLUDES

FREE
NEWNES ONLINE
MEMBERSHIP

ANALOG CIRCUITS

WORLD CLASS DESIGNS

- Hand-picked content selected by analog design legend Robert Pease
- Proven best design practices for op amps, feedback loops, and all types of filters
- Case histories and design examples get you off and running on your current project



Robert A. Pease

Analog Circuits

World Class Designs

Newnes World Class Designs Series

Analog Circuits: World Class Designs

Robert A. Pease

ISBN: 978-0-7506-8627-3

Embedded Systems: World Class Designs

Jack Ganssle

ISBN: 978-0-7506-8625-9

Power Sources and Supplies: World Class Designs

Marty Brown

ISBN:978-0-7506-8626-6

For more information on these and other Newnes titles, visit: www.newnespress.com

Analog Circuits

World Class Designs

Robert A. Pease, Editor

with

Bonnie Baker
Richard S. Burwen
Sergio Franco
Phil Perkins
Marc Thompson
Jim Williams
Steve Winder



ELSEVIER

AMSTERDAM • BOSTON • HEIDELBERG • LONDON
NEW YORK • OXFORD • PARIS • SAN DIEGO
SAN FRANCISCO • SINGAPORE • SYDNEY • TOKYO

Newnes is an imprint of Elsevier



Newnes

Newnes is an imprint of Elsevier
30 Corporate Drive, Suite 400, Burlington, MA 01803, USA
Linacre House, Jordan Hill, Oxford OX2 8DP, UK

Copyright © 2008, by Elsevier Inc. All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher.

Permissions may be sought directly from Elsevier's Science & Technology Rights Department in Oxford, UK: phone: (+44) 1865 843830, fax: (+44) 1865 853333, E-mail: permissions@elsevier.com. You may also complete your request online via the Elsevier homepage (<http://elsevier.com>), by selecting "Support & Contact" then "Copyright and Permission" and then "Obtaining Permissions."



Recognizing the importance of preserving what has been written, Elsevier prints its books on acid-free paper whenever possible.

Library of Congress Cataloging-in-Publication Data

Application Submitted

British Library Cataloging-in-Publication Data

A Catalogue record for this book is available from the British Library.

ISBN: 978-0-7506-8627-3

For information on all Newnes publications
visit our Web site at www.books.elsevier.com

08 09 10 11 10 9 8 7 6 5 4 3 2 1

Typeset by Charon Tec Ltd (A Macmillan Company), Chennai, India
www.charontec.com

Printed in the United States of America

Working together to grow
libraries in developing countries

www.elsevier.com | www.bookaid.org | www.sabre.org

ELSEVIER

BOOK AID
International

Sabre Foundation

Table of Contents

| | |
|--|------------------|
| <i>Preface</i> | <i>xiii</i> |
| <i>About the Editor</i> | <i>xix</i> |
| <i>About the Authors</i> | <i>xxi</i> |
| | |
| <i>Chapter 1: Review of Feedback Systems</i> | <i>1</i> |
| Introduction and Some Early History of Feedback Control | 1 |
| Invention of the Negative Feedback Amplifier | 2 |
| Control System Basics | 4 |
| Loop Transmission and Disturbance Rejection | 5 |
| Stability | 6 |
| Routh Stability Criterion..... | 8 |
| The Phase Margin and Gain Margin Tests | 11 |
| Relationship Between Damping Ratio and Phase Margin | 12 |
| Loop Compensation Techniques—Lead and Lag Networks | 13 |
| Parenthetical Comment on Some Interesting Feedback Loops | 15 |
| Example 1-1: Gain of +1 amplifier | 17 |
| Example 1-2: Gain of +10 amplifier | 19 |
| Example 1-3: Integral control of reactive load | 20 |
| Example 1-4: Photodiode amplifier | 25 |
| Example 1-5: MOSFET current source | 28 |
| Example 1-6: Maglev example | 33 |
| Appendix: MATLAB Scripts | 37 |
| References..... | 41 |
| | |
| <i>Chapter 2: My Approach to Feedback Loop Design</i> | <i>45</i> |
| My Approach to Design..... | 46 |
| What Is a V/I Source?..... | 47 |
| An Ideal V/I Source | 48 |
| Designing a V/I Source..... | 49 |
| Capacitive Load Compensation | 52 |
| Model to Investigate Overshoot | 54 |

Back to the Frequency Domain.....56
Range of Compensation Required59
Phase Margin Approach to Loop Compensation60
LTX Device Power Source (DPS) Performance61
Summary of My Method.....62

Chapter 3: Basic Operational Amplifier Topologies and a Case Study63
In This Chapter63
Basic Device Operation63
Example 3-1: Case study: Design, analysis, and simulation of a discrete operational amplifier68
Brief Review of LM741 Op-Amp Schematic75
Some Real-World Limitations of Operational Amplifiers76
Example 3-2: Op-amp driving capacitive load80
References.....83

Chapter 4: Finding the Perfect Op-Amp for Your Perfect Circuit87
Choose the Technology Wisely.....89
Fundamental Operational Amplifier Circuits.....90
Using These Fundamentals98
Amplifier Design Pitfalls101
References.....102

Chapter 5: Review of Passive Components and a Case Study in PC Board Layout.....103
In This Chapter103
Resistors.....103
Comments on Surface-Mount Resistors106
Comments on Resistor Types.....107
Capacitors107
Inductors111
Printed Circuit Board Layout Issues.....112
Approximate Inductance of a PCB Trace Above a Ground Plane.....115
Example 5-1: Design case study—high-speed semiconductor laser diode driver116
References.....124

Chapter 6: Analog Lowpass Filters127
In This Chapter127
A Quick Introduction to Analog Filters.....127
Passive Filters.....128

| | |
|---|------------|
| Normalization and Denormalization..... | 129 |
| Poles and Zeros..... | 130 |
| Active Lowpass Filters..... | 130 |
| First-Order Filter Section..... | 131 |
| Sallen-Key Lowpass Filters..... | 131 |
| Sallen-Key Rolloff Deficiencies..... | 132 |
| Denormalizing Sallen-Key Filter Designs..... | 136 |
| State Variable Lowpass Filters..... | 137 |
| Cauer and Inverse Chebyshev Active Filters..... | 137 |
| Denormalizing State Variable or Biquad Designs..... | 139 |
| Frequency-Dependent Negative Resistance Filters..... | 141 |
| Denormalization of FDNR Filters..... | 144 |
| References..... | 146 |
| | |
| Chapter 7: Highpass Filters..... | 147 |
| In This Chapter..... | 147 |
| Passive Filters..... | 147 |
| Active Highpass Filters..... | 150 |
| First-Order Filter Section..... | 152 |
| Sample-and-Difference Circuit..... | 153 |
| Sallen-Key Highpass Filter..... | 153 |
| Using Lowpass Pole to Find Component Values..... | 154 |
| Using Highpass Poles to Find Component Values..... | 155 |
| Operational Amplifier Requirements..... | 155 |
| Denormalizing Sallen-Key or First-Order Designs..... | 156 |
| State Variable Highpass Filters..... | 157 |
| Cauer and Inverse Chebyshev Active Filters..... | 158 |
| Denormalizing State Variable or Biquad Designs..... | 162 |
| Gyrator Filters..... | 163 |
| References..... | 167 |
| | |
| Chapter 8: Noise: The Three Categories—Device, Conducted, and Emitted..... | 169 |
| Types of Noise..... | 169 |
| Definitions of Noise Specifications and Terms..... | 170 |
| References..... | 198 |
| | |
| Chapter 9: How to Design Analog Circuits Without a Computer or a Lot of Paper..... | 201 |
| Thoughts on Designing a Circuit..... | 201 |
| My Background..... | 202 |

Breaking Down a Circuit 205
Equivalent Circuits 205
Stock Parts Values 207
RC Networks 208
Stabilizing a Feedback Loop 212
Circuit Impedance 215
New Parts 216
Breadboarding 216
Testing 217
How Much to Learn 217
Settling Time Tester 217
Final Notes 224

Chapter 10: Bandpass Filters 225
In This Chapter 225
Lowpass-to-Bandpass Transformation 226
Passive Filters 226
Formula for Passive Bandpass Filter Denormalization 230
Active Bandpass Filters 231
Bandpass Poles and Zeros 232
Bandpass Filter Midband Gain 235
Multiple Feedback Bandpass Filter 236
Dual-Amplifier Bandpass Filter 238
Denormalizing DABP Active Filter Designs 240
State Variable Bandpass Filters 241
Denormalization of State Variable Design 242
Cauer and Inverse Chebyshev Active Filters 243
Denormalizing Biquad Designs 245
References 245

Chapter 11: Bandstop (Notch) Filters 247
A Closer Look at Bandstop Filters 247
Passive Filters 248
Formula for Passive Bandstop Filter Denormalization 252
Active Bandstop Filters 254
Bandstop Poles and Zeros 254
The Twin Tee Bandstop Filter 258
Denormalization of Twin Tee Notch Filter 259
Practical Implementation of Twin Tee Notch Filter 260

| | |
|---|------------|
| Bandstop Using Multiple Feedback Bandpass Section | 260 |
| Denormalization of Bandstop Design Using MFBP Section..... | 261 |
| Bandstop Using Dual-Amplifier Bandpass Section | 261 |
| Denormalization of Bandstop Design Using DABP Section..... | 263 |
| State Variable Bandstop Filters | 263 |
| Denormalization of Bandstop State Variable Filter Section | 263 |
| Cauer and Inverse Chebyshev Active Filters | 264 |
| Denormalization of Bandstop Biquad Filter Section | 266 |
| References..... | 267 |
| Chapter 12: Current-Feedback Amplifiers | 269 |
| The Current-Feedback Concept | 269 |
| The Conventional Op-Amp..... | 271 |
| Gain-Bandwidth Tradeoff | 272 |
| Slew-Rate Limiting | 273 |
| The Current-Feedback Amplifier | 275 |
| No Gain-Bandwidth Tradeoff | 278 |
| Absence of Slew-Rate Limiting | 279 |
| Second-Order Effects | 280 |
| CF Application Considerations..... | 282 |
| CF Amp Integrators | 283 |
| Stray Input-Capacitance Compensation..... | 284 |
| Noise in CF Amp Circuits..... | 285 |
| Low Distortion for Fast Sinewaves Using CF Amps..... | 286 |
| Drawbacks of Current-Feedback Amplifiers vs. Conventional Op-Amps..... | 287 |
| References..... | 287 |
| Chapter 13: The Basics Behind Analog-to-Digital Converters | 289 |
| In This Chapter | 289 |
| The Key Specifications of Your ADC..... | 290 |
| The CMOS SAR Topology | 304 |
| Delta-Sigma ($\Delta-\Sigma$) Converters..... | 310 |
| Decimation Filter | 320 |
| References..... | 325 |
| Chapter 14: The Right ADC for the Right Application | 327 |
| In This Chapter | 327 |
| Classes of Input Signals..... | 327 |
| Temperature Sensor Signal Chains | 332 |
| Using an RTD for Temperature Sensing: SAR Converter or $\Delta-\Sigma$ Solution?..... | 335 |

The RTD Current Excitation Circuit for the SAR Circuit337
 RTD Signal Conditioning Path Using the SAR ADC.....338
 RTD Signal Conditioning Path Using the $\Delta-\Sigma$ ADC.....340
 Measuring Pressure: SAR Converter or $\Delta-\Sigma$ Solution?.....341
 The Piezoresistive Pressure Sensor342
 The Pressure Sensor Signal Conditioning Path Using a SAR ADC343
 Pressure Sensor Signal Conditioning Path Using a $\Delta-\Sigma$ ADC344
 Photodiode Applications.....345
 Photosensing Signal Conditioning Path Using a SAR ADC345
 Photosensing Signal Conditioning Path Using a $\Delta-\Sigma$ ADC346
 Motor Control Solutions347
 A Few Final Words352
 References.....353

Chapter 15: Working the Analog Problem From the Digital Domain355

In This Chapter355
 Pulse Width Modulator (PWM) Used as a Digital-to-Analog Converter356
 Looking at This Reference in the Time Domain.....356
 Changing This Digital Signal to Analog.....358
 Defining Your Analog Lowpass Filter for Your PWM-DAC.....359
 Pulling the Time Domain and Frequency Domain Together362
 Using the Comparator for Analog Conversions.....363
 Input Range of a Comparator (V_{IN+} and V_{IN-}).....364
 Input Hysteresis364
 Window Comparator365
 Combining the Comparator with a Timer366
 Using the Timer and Comparator to Build a $\Delta-\Sigma$ A/D Converter368
 $\Delta-\Sigma$ Theory368
 The Controller Implementation.....370
 Error Analysis of This $\Delta-\Sigma$ A/D Converter Implemented With a Controller.....373
 $R_{DS(ON)}$ Error373
 $RA0$ Port Leakage Current373
 Nonsymmetrical Output Port ($RA3$).....373
 Voltage Reference373
 Other Input Ranges374
 Input Range of 2 V to 3 V.....374
 Input Range of 10 V to 15 V.....375
 Input Range of ± 500 mV.....376
 Final Thoughts377
 References.....378

Chapter 16: What’s All This Error Budget Stuff, Anyway?379

Chapter 17: What’s All This V_{BE} Stuff, Anyway?383

Part 1383

Part 2389

Next Topic.....390

Chapter 18: The Zoo Circuit393

History, Mistakes, and Some Monkeys Design a Circuit393

References.....412

Appendix A: Analog-to-Digital Converter Specification

Definitions and Formulas415

References.....424

Appendix B: Capacitor Coefficients for Lowpass

Sallen-Key Filters425

Index 429

This page intentionally left blank

Preface

Comments on “World-Class” Analog Design

Achieving excellence in analog circuit design has always been challenging. These days it is still not always easy, so we want to help with some general advice. All the authors of these chapters have presented their best ideas as the kinds of things a good analog circuit designer must know to consistently accomplish very good circuits.

These days so much of analog circuit design can be done using operational amplifiers (op-amps) with a small number of discrete resistors and capacitors. It is often very easy to slap in resistors and the circuit works well. However, this is still not trivial. You might have to pick sets of matched resistors or add a trimpot. Even these days some young engineers have to ask, “So, should I make a 1-ohm/1-ohm unity-gain inverter?” Some kids really don’t know how to pick appropriate resistor values; they have never done any practical work or lab work. So we have to teach them about practical circuits. We have to teach them about error budgets. Sometimes 1% resistors are quite appropriate; other times 5%, 10%, 0.1%, or 0.01% might be right. Richard Burwen has good comments on resistors. More on error budgets later.

Recently a guy showed me his design with eight precision op-amps and sixteen precision resistors. After I did some whittling out, we got it down to two precision resistors and one precision op-amp and a greatly improved error budget. More on error budgets later.

Once upon a time, in the 1950s, there were no operational amplifiers that you could buy. The engineers at Philbrick Researches wrote a twenty-eight-page *Applications Manual for Octal Plug-In Computing Amplifiers* (such as the K2-W, see **Figure P-1**). With a little advice from this pamphlet, you could design analog computing circuits and some simple instrumentation, too. I came to work at Philbrick about that time (1960). I studied operational amplifiers based on vacuum tubes and then high-performance solid-state amplifiers.

Applications Notes

Then about 1965, the new arts and applications using transistorized op-amps showed the need for a comprehensive *Applications Manual for Computing Amplifiers for Modeling*,

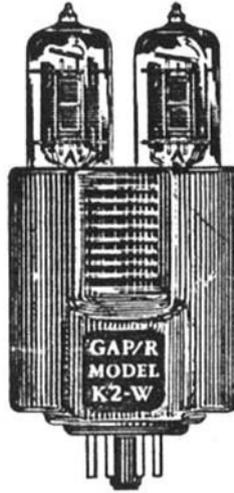


Figure P-1: Philbrick K2-W, 1952 to 1992.

Measuring, Manipulating, and Much Else. Dan Sheingold, George Philbrick, Bruce Seddon, and several others wrote a lot. I contributed a small bit. This book was *very* useful. My theory is that when Bob Widlar brought out the μ A709, he couldn't have *given* it away, but Philbrick had sold and given away many thousands of these books, which made it reasonably easy to apply those IC op-amps. This book was sold for several years for \$3. Recently, a good copy sold on e-bay for \$300+. It's darn near worth it. Can you get the basic info off the Web? I'll have to look it up on Analog Devices' Website.

Other companies such as Burr Brown, Analog Devices, and TI wrote lots of App Notes and books on op-amp applications. I was never very impressed with them; they were not good explainers. NSC published lots of App Notes. Not all were well documented, but they were pretty good circuits.

Which Op-Amp?

Even for experienced engineers, this can be a bewildering question. There are many low-voltage and high-voltage op-amps; low-voltage noise and high-voltage noise; low-power and high-speed amplifiers; and cheap and expensive ones. Let's see what insights Bonnie Baker can offer.

Precision Capacitors?

How many kid engineers know the price of 1% capacitors? Precision capacitors are rarely justifiable. Yet not all 1% capacitors are really high priced. Sometimes a dime will get you that; other times, it could take a dollar or two. And sometimes a circuit really does

need 1% capacitors. I just got a *thick* Digikey Catalog the other day, and it has 2% and 1% tolerance polypropylene capacitors at surprisingly reasonable prices, even in small quantities!

Inductors?

Inductors are specialized animals that may be required for filters and for switch-mode regulators. Usually the designer of the switcher provides detailed advice on what to buy. If not, then designing with inductors, or redesigning to adjust the inductor type or values, is a special advanced area of expertise. Most schools don't teach much of this. The design of switchers can be either a high-tech specialty or a monkey-see, monkey-do exercise. The latter might not be as cheap, but it usually does work well.

Diodes

Diodes can be a truly bewildering field. Some can carry small milliamperes; some can leak less than a picoampere; some rectifiers can carry amperes without overheating. But the big ones (such as 1N4005) often cannot be used at high frequencies. The 2N5819 Schottky rectifier can carry a couple amperes, but it is somewhat leaky. Still, it can rectify up to 1 MHz without misbehaving. Who's going to teach everybody about diodes?

Especially tricky is the fact that some good, fast small-signal diodes (1N4148/1N914) do turn on and off quickly—faster than 1 nanosecond sometimes—but at low rep rates, some of them sort of forget how to turn on and have a bad overshoot. That's annoying.

Transistors and Designing With Them

Now, when you get to transistors, this becomes complicated. Designing with transistors is a whole 'nother game. Even experienced analog designers try to minimize that when they can. But sometimes you have to use transistors. Sometimes the transistor's inherent log characteristics are very important. Can you buy a logger? Yes, several companies make and sell loggers. But loggers can be designed for special cases, which a store-bought logger cannot handle, such as low voltage. I've done a couple of these in the last year. I still design low-noise and high-speed amplifiers occasionally using selected transistors, such as 2N3904 and LM394. I often use the curves from "What's All This V_{BE} Stuff, Anyhow?" Or you might merely need to use a transistor as a switch—a crude one or a precision switch.

Filters

When you need a filter, it might not be hard to figure out what is needed; other times more research is needed. Can you avoid inductors? Can you avoid expensive op-amps?

Can you avoid high impedances *or* large capacitors? As with all of analog design, this covers a *huge* dynamic range, and there is usually nothing simple about it. Yet it gets done.

SPICE

I usually try to avoid using SPICE. I use pen and paper; I call it “back-of-envelope SPICE.” I do mostly hand computations, and good approximations, using my slide rule or by doing the math in my head. You might say I am in agreement with Dick Burwen’s chapter, “How to Design Analog Circuits Without a Computer.” Other people think that SPICE is acceptable over a wide range of applications. That makes me nervous. I find that you can use SPICE to save an hour of computation every day for a month and then discover that SPICE has made a costly mistake that wastes all the time you thought you saved. Some people agree with me on that.

Also, when people use monolithic transistor models (such as the ones in the monolithic array, LM3046), that is different from designing with discrete transistors. I mean, who will give you a free model of a 2N3904 that is worth what you paid for it? And in what regimes do you trust it? I would trust it for *only* the crudest noncritical applications.

Some people say they like to trust SPICE. If they get good models and they know what they are doing, good luck to them.

I will mention a few particular places where SPICE models do not usually work well:

- At low values of V_{ce} (or V_{ds}), where the transistors are starting to saturate.
- At high frequencies at low values of V_{ce} (or V_{ds}), where the frequency response of the transistor does not ring true.
- Monolithic transistors are *often* badly modeled where they saturate (or start to saturate) since the substrate currents get large.
- Sometimes when an op-amp’s inputs get reversed, it will still appear to work like an op-amp without saturating. *Some* kinds of SPICE do work right in this situation, but not all.
- If somebody gives you a bad model, you might have problems. Even when you make your own model, it could have problems.
- Sometimes SPICE fails to converge and wastes a lot of your time.
- Sometimes SPICE gives an absurd answer, such as saying that a 10 exp-25 ampere current step has a real risetime. How can a “current” that consists of 1 electron per day show a “risetime”?

- Usually in a band-gap reference, the fine details of a temperature characteristic do not go in the right direction. SPICE cannot lead you to a better answer. My old LM131 from 1977 had (and still has) a good tempco because it was based on good breadboards. When I tried to run it in SPICE many years later, SPICE said it did not work and could not be made to work. It's a good thing I didn't try it in SPICE in 1977. SPICE was wrong.
- In any circuit where transistors are heated or self-heated, the temp rise of the transistors is *very* hard to model, especially in a distributed layout.
- And sometimes SPICE just *lies*. Sometimes it just gives incorrect answers.

I've had debates with many "SPICE experts" and they try to tell me I am wrong. But I have seen too many cases where I was right and SPICE was wrong. I say this because people bring me their problems when their circuit does not work. I can see through the errors of SPICE; I use special test techniques (mostly in the time domain or in thought experiments) to show why a circuit is misbehaving. SPICE is not only *no help*, it leads to "computer-hindered design."

How Many?

How many are you going to build? If you are going to build large numbers or small, it makes a difference how you engineer it, for minimum overall cost and maximum output.

Low Noise?

Many general-purpose op-amps are pretty quiet, but some that are quiet at low impedance are noisy at high impedances. Others that are quiet at high impedance are noisy at low impedance. Let's see what comments Bonnie Baker has on this topic.

Troubleshooting?

Once you get your circuit built, you apply power and then it does (or does not) work correctly. How do you do the troubleshooting? Better yet, how do you plan in advance a way that you can easily do the needed troubleshooting?

Check out the Bob Pease book *Troubleshooting Analog Circuits*. With 39,000 copies in print in six languages, it has *legs*—and that's because analog circuit troubles do not go away by wishing and sometimes not even by engineering. Sometimes they are solved only by real troubleshooting. But planning ahead can help. See www.national.com/rap/Book/0,1565,0,00.html.

The Future?

People often ask, “Would you encourage your son or daughter to go into engineering?” I reply, “Yes, if it is analog circuit design.” They say, “Explain!”

I respond, “My friends and I know many analog design techniques, tricks, and secrets. They cannot be learned from SPICE. Every year there are 200,000 Chinese engineering graduates, and they don’t know what we know. We can solve problems they cannot.”

I rest my case. /rap

—Robert A. Pease
Staff Scientist, NSC
Santa Clara, CA
August 2007
rap@galaxy.nsc.com

P.S. One of the authors of a chapter in this book said that he took a “well-designed” system and put a good model of it into SPICE. When he ran it, he was surprised to find a sneaky sampling error. So we should not say that SPICE cannot be helpful. We just have to be cautious about trusting SPICE—in any positive or negative way.

About the Editor

Robert A. Pease (Chapters 16, 17, and Appendix B)

Robert A. Pease attended Mt. Hermon School, and graduated from MIT in 1961 with a BSEE. He worked at Philbrick Researches up to 1975 and designed many OpAmps and Analog Computing Modules.

He joined National Semiconductor in 1976. He has designed about 24 analog ICs including power regulators, voltage references, and temp sensors. He has written 65+ magazine articles and holds about 21 US patents. Pease is the self-declared Czar of Bandgaps since 1986. He enjoys hiking and trekking in Nepal, and ferroequinology. His position at NSC is Staff Scientist. He is a Senior Member of the IEEE.

Pease wrote the definitive book, “Troubleshooting Analog Circuits”, now in its 18th printing. It has been translated into French, German, Dutch, Russian, and Polish. Pease is a columnist in *Electronic Design* magazine, with over 240 columns published. The column, “Pease Porridge”, covers a wide range of technical topics.

He also has posted many technical and semi-technical items on his main web-site: <http://www.national.com/rap>. Many of Pease’s recent columns are accessible there.

Pease was inducted into the E.E. Hall Of Fame in 2002. Refer to: <http://www.elecdesign.com/Articles/Index.cfm?ArticleID=17269&Extension=pdf>. See Pease’s other web site at <http://www.transtronix.com>. He can be contacted at rap@galaxy.nsc.com.

P.S. Pease is also the self-declared Czar of Proofreading, for ~20 years. He has proof-read several books and many technical articles. Without his sharp eye, this book would have been hard to bring out with fully accurate information, as there are so many opportunities for errors in a technical document of this magnitude.